

## **GLENN LOUNGE CHAIR CARE INSTRUCTIONS**

These instructions are provided for your convenience. It is very important that they are read carefully and completely before beginning use of this item.(Applies to items 727479)



## CARE:

**Teak:** Natural Teak will silver over time if left uncovered. Brush off dirt and debris with a soft brush or rinse off with garden hose. Dry with non-scratching cloth. Light sanding can restore original teak color.

## All Weather Weave:

Brush off dirt and debris with a soft brush or rinse off with garden hose. Dry with non-scratching cloth. For a deeper clean, mix warm water and mild soap, and clean with soft brush. Rinse with water and dry with soft cloth. Do not use abrasive cleansers or solvents.

## **Cushion:**

Brush off dirt and debris with a soft brush. Use mild fabric cleanser with warm water for subborn dirt. Rinse thoroughly. To drain water, place cushions on edge with open zipper.