

MONTECITO COLLECTION CARE INSTRUCTIONS

These instructions are provided for your convenience. It is very important that they are read carefully and completely before beginning use of this item. (Applies to items 729279, 730679, 731279, 740079, 739579, 775379, 728079, 739779, 737179, 727979).



CARE:

Teak:

Brush off dirt and debris with a soft brush or rinse off with garden hose. Dry with non-scratching cloth. Light sanding can restore original teak color.

All Weather Weave:

Brush off dirt and debris with a soft brush or rinse off with garden hose. Dry with non-scratching cloth. For a deeper clean, mix warm water and mild soap, and clean with soft brush. Rinse with water and dry with soft cloth. Do not use abrasive cleansers or solvents.

Cushion:

Brush off dirt and debris with a soft brush. Use mild fabric cleanser with warm water for subborn dirt. Rinse thoroughly. To drain water, place cushions on edge with open zipper.

T. 800.274.7730 | F.510.234.7234 PALECEK.COM